

*Eden Rose™* 250M  
LIMITED EDITION



### Top features

**BUILT-IN NEEDLE THREADER**

- Threads the needle instantly
- Makes threading easy and reduces eye strain

**ONE STEP BUTTONHOLE**

Quick and easy to sew buttonholes the perfect size.

**SEWING GUIDE REFERENCE CHART**

Refer to your built-in Sewing Guide Reference Chart for recommendations on presser foot, stitch length, stitch width, thread tension, and presser foot pressure for your fabric type and sewing technique.

**SNAP ON PRESSER FEET**

Makes it easy to move from one special sewing technique to the next.

**LIMITED EDITION WITH AN EDEN ROSE™ PRESSER FOOT KIT**

The EDEN ROSE™ Presser Foot kit is included as an extra value with your purchase. HUSQVARNA VIKING® is known for developing innovative new presser feet that define and evolve with current sewing trends. This kit helps you to develop your creative sewing skills for all kinds of projects.

- A, B, Transparent B, C, D, E, H, J, P,
- R (Buttonhole foot)
- 22 Stitches
- Limited Edition Presser Foot Kit



**A LIMITED EDITION PRESSER FOOT KIT INCLUDED!**

The Presser Foot Kit contains three optional presserfeet for specialty sewing:

- GATHERING FOOT
- CLEAR PIPING FOOT
- BRAIDING FOOT

 


*Feature*

*Technique*

*Benefit*

SEWS  
ON ALL TYPES  
& WEIGHTS



FABRICS: Woven Medium chino and Stretch Light Tricot

SELECT: Straight stitch (1) on stitch selection dial. Stitch length 2.5. Stitch width 5.

USE: Presser Foot A

SHOW: Sewing Guide Reference Chart.

SEW: Fold both fabrics in half (right sides together). Sew along the fold, one right after the other, using 3/8" (15 mm) seam allowance.

FABRIC: Woven Heavy denim

SELECT: Stitch length 3



USE: Presser Foot A

SEW:

- Fold denim in half, wrong sides together.
- Sew along the fold using 3/8" (15 mm) seam allowance.
- Fold the seam to one side.
- Topstitch down along the edge of the fold.
- Fold up the bottom raw edge twice to form a hem.
- Sew the hem in place.

- When you select a stitch, you are ready to sew.
- Your HUSQVARNA VIKING® EDEN ROSE™ 250M will sew all different types of fabrics, without having to change the tensions.
- The built-in Sewing Guide Reference Chart recommends the best settings for the type and weight of fabric and the technique you are using.
- Electronic power provides greater penetration power even at slower speeds, whether stitching one stitch at a time or at full speed.

EASY  
THREADING  
AND EASY  
BOBBIN  
WINDING

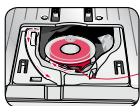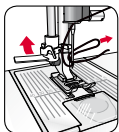


SHOW:

- Threading the top thread.
- Built-in needle threader.

SHOW:

- Where bobbin is wound.
- Bobbin Stop.

- The built-in needle threader makes threading so easy.
- Your HUSQVARNA VIKING® EDEN ROSE™ 250M has an easy threading system. See how easy it is to thread.
- The bobbin stops winding automatically when it is full.

Feature	Technique	Benefit
<p>PERFECT REPEATING BUTTONHOLES</p> 	<p>SHOW: Buttonhole Samples on different types of fabrics.</p> <p>FABRIC: Woven Medium chino and stabilizer</p> <p>SELECT: Buttonhole on the stitch selection dial. Stitch length is set at the buttonhole setting. Stitch width 5. Thread tension 4-5.</p> <p>USE: R Foot (Automatic Buttonhole foot)</p> <p>SEW:</p> <ul style="list-style-type: none"> <li>• Fold the fabric in half with a piece of stabilizer between the layers.</li> <li>• Turn the hand wheel toward you to raise the needle to the highest position.</li> <li>• Slide the button holder to the back.</li> <li>• Place the button into the adjustable measuring guide on the back of the foot.</li> <li>• Bring the button holder forward until it holds the button tightly.</li> <li>• Position the fabric under the presser foot. Buttonholes are sewn from front to back.</li> <li>• Lower the buttonhole lever. Push it back until it clicks into place.</li> <li>• Holding the thread tail, start sewing.</li> <li>• To sew the next buttonhole, turn the stitch selection dial to the curved arrow and then back to the buttonhole.</li> <li>• When finished, push the buttonhole lever up.</li> </ul>	<ul style="list-style-type: none"> <li>• The automatic buttonhole foot can hold a button up to 2.5 cm (1”).</li> <li>• Adjust the stitch length dial within the buttonhole range to alter density for different types and weights of fabrics.</li> <li>• Buttonholes can also be done manually with the “C” foot.</li> </ul>
<p>PERFECTLY FABRIC FEEDING</p>	<p>Before sewing, talk about the HUSQVARNA VIKING® feeding system.</p>	<ul style="list-style-type: none"> <li>• HUSQVARNA VIKING® sewing machines have diamond-point feed teeth. They move fabric evenly, and fabric doesn't get caught.</li> <li>• HUSQVARNA VIKING® sewing machines have a box-feed system. Feed teeth move straight up, back, and down for the most efficient feeding of your project.</li> </ul>

## Feature

## Technique

## Benefit

SERGING/  
OVERCAST  
STITCHES

FABRIC: Stretch Medium sweatshirt fleece and ribbing

SELECT: The “stretch” setting on the stitch length dial. Select Stretch seam/overcast (6) on the stitch selection dial. Stitch length to the center of the stretch range. Stitch width 5.


USE: Presser Foot B

SHOW: Sewing Guide Reference Chart

SEW: Cut a small neckline in the sweatshirt fleece.

- Fold the ribbing in half lengthwise, stretch to fit the neckline curve in the fleece.
- Sew near the fabric edge, creating a neckline.

- Sew the seam and overcast the edge at the same time to prevent raveling.
- Create a seam that will stretch on knit fabrics.
- Adjustable presser foot pressure makes it easy to accommodate all thicknesses and weights of fabric.

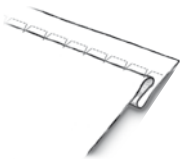EASY BLIND  
HEM

FABRIC: Woven Medium wool


SELECT: Stitch length 1.5 on the stitch length dial. Select Blind hem stitch (5) on the stitch selection dial. Stitch width 5.

USE: Presser Foot D. Turn the orange dial on Presser Foot D until the wide stitch of the blind hem barely catches fabric fold.

SEW:

- Fold up the hem on the wool.
- Keep the fold of fabric along the inner edge of the right toe of foot.

- With the perfectly-engineered blind hem foot, your HUSQVARNA VIKING® EDEN ROSE™ 250M sews a beautiful blind hem.
- “Fine tune” the blind hem width for different types of fabrics. Move Presser Foot D guide from left to right as needed by turning the orange dial on the presser foot.

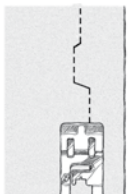MULTIPLE  
NEEDLE  
POSITIONS

FABRIC: Woven Medium chino

SELECT: Straight stitch (1) on the stitch selection dial. Stitch length 2.5. Stitch width 5.

USE: Presser Foot A

SEW:

- Fold fabric in half and place along the long edge of foot.
- Sew a seam.
- Adjust the needle position by adjusting stitch width to 0.
- Sew another seam along the same fold.

- Multiple needle positions make it easy to sew with cording or piping, and to insert zippers.
- Topstitching, under stitching, stitching in the ditch, and edge stitching are also easier with this feature.
- Perfect for garment sewing, crafts, and quilting.

Feature	Technique	Benefit
JAM-PROOF BOBBIN	<p>FABRIC: Woven Medium calico</p> <p>SELECT: Straight stitch (1) on the stitch selection dial. Stitch length 2.5. Stitch width 5.</p> <p>USE: Presser Foot A</p> <p>SEW: Piece quilt strips together with one continuous seam, stitching “on air” between fabric strips.</p>	<ul style="list-style-type: none"> <li>Jam-proof rotary hook system allows you to sew off the fabric.</li> <li>Your HUSQVARNA VIKING® EDEN ROSE™ 250M allows easy strip-piecing with this feature.</li> <li>A wonderful feature for the quilter, home dec sewer, garment sewer — everyone!</li> </ul>
EASY STITCH SELECTION	<p>SHOW: HUSQVARNA VIKING® EDEN ROSE™ 250M has easy stitch selection by turning the dial.</p>	<ul style="list-style-type: none"> <li>Was this the type you were looking for?</li> </ul>
BUILT-IN DECORATIVE STITCHES	<p>SHOW: Decorative Stitch Notebook Cover Sample.</p> <p>FABRIC: Woven Medium chino and stabilizer</p> <p>SELECT: Decorative stitch (9) on the stitch selection dial. Stitch length dial to 0-1. Stitch width 5.</p> <p>USE: Transparent Presser Foot B</p> <p>SEW: A few repeats of a decorative stitch</p> <p>SEW: Adjust the stitch width and length for different effects and sew again.</p>	<ul style="list-style-type: none"> <li>Decorative stitches can be used to: <ul style="list-style-type: none"> <li>Add interest to a project</li> <li>Embellish ready-to-wear garments.</li> </ul> </li> </ul>
ALPHABETS/ MONOGRAMS	<p>SHOW: Tapered Monogram in the Monogram Sample.</p> <p>FABRIC: Woven Medium chino and stabilizer</p> <p>SELECT: Zigzag (2) on stitch selection dial. Stitch length in buttonhole area. Stitch width 0.</p> <p>USE: Presser Foot B</p> <p>SEW:</p> <ul style="list-style-type: none"> <li>Draw a monogram letter on the fabric using water soluble marker.</li> <li>Increase stitch width slowly toward 5 as you sew to form a satin stitch. Follow the lines of monogram.</li> <li>At the end of the monogram letter, slowly reduce the stitch width toward 0 to taper the satin stitch to a tapered end.</li> </ul>	<ul style="list-style-type: none"> <li>Was this the type you were looking for?</li> </ul>